



## angle grinder spare parts list

| No. | Part Name          | QTY | No. | Part Name         | QTY |
|-----|--------------------|-----|-----|-------------------|-----|
| 1   | Wheel cover        | 1   | 16  | Bearing Cover     | 1   |
| 2   | Outer Flange       | 1   | 17  | Armature AT3108   | 1   |
| 3   | Inner Flange       | 1   | 18  | Bearing           | 1   |
| 4   | Output shaft       | 1   | 19  | Bearing Sleeve    | 1   |
| 5   | Bearing box        | 1   | 20  | Wind baffle       | 1   |
| 6   | Bearing            | 1   | 21  | Field Coil AT3108 | 1   |
| 7   | Bearing Cover of   | 1   | 22  | Carbon brush      | 2   |
| 8   | Big Gear           | 1   | 23  | Coil spring       | 2   |
| 9   | Needle bearing     | 1   | 24  | Brush holder      | 2   |
| 10  | Head Shell         | 1   | 25  | Switch            | 1   |
| 11  | Spindle Lock       | 1   | 26  | Rear cover        | 1   |
| 12  | Compression Spring | 1   | 27  | Motor housing     | 1   |
| 13  | Lock Nut           | 1   | 28  | Cord guard        | 1   |
| 14  | Small gear         | 1   | 29  | Cable plug        | 1   |
| 15  | Bearing            | 1   | 30  | Spanner           | 1   |