



rotary hammer spare parts list

N0.	Part Name	Qty	No.	Part Name	Qty
1	Dust Cap	1	51	Stand Fork	1
2	Ring Spring 14*1.5	1	52	O Ring 23.5*2.5	1
3	Pad 16*22*1.6	1	53	Bearing 609	1
4	Ring Spring 19*2	1	54	Bearing Cover	1
5	Chuck Cover	1	55	Screw M4x8	2
6	Washer 21*32*4	1	56	Middle shaft	1
7	Steel Ball Ø7.14	1	57	Bearing 699	1
8	Flower Washer	1	58	Shift Switch	1
9	Spring	1	59	Ring Spring	1
10	Cylinder	1	60	Neeble bearing HK0908	1
11	O RING 21.5*1.8	1	61	Rocking Bearing	1
12	Oil Proof Seal8*16*5	1	62	Neeble Bearing K15*18*16.5	1
13	Spacing Collar	1	63	Helical Gear	1
14	Impact Bolt	1	64	Spring	1
15	Screw ST4x40	4	65	Spring Seat	1
16	Gear housing	4	66	Washer	1
17	Oil Proof Seal 30*41.3*7	1	67	Gasket	1
18	Bearing cover 3012	1	68	Washer	1
19	Neeble bearing HK3012	1	69	Insulation Washer	1
20	Neeble bearing HK0709YG-2	1	70	Bearing 608	1
21	9T Flower Washer	1	71	Bearing Cover	1
22	Screw ST4x14	11	72	Air Deflector	1
23	Outside Ring Spring	1	73	Screw ST4*50	2
24	Washer 30*43*1.5	1	74	Stator	1
25	Spring	1	75	P.V.C.Film	1
26	O Ring 11*2.5	1	76	Housing	1
27	Steel-shank	1	77	Right Handle	1
28	Shift Knob	1	78	Disc Spring	2
29	Shift Spring	1	79	Inductance	1
30	Quadrel	1	80	Screw ST3x10	4
31	Big gear	1	81	Brush Holder	2
32	Steel Ball	4	82	Carbon Brush	2
33	Teleflex	1	83	Switch	1
34	Locating Pin 2.5*12	3	84	Capacitor	1
35	Stop Collar	1	85	Plain Washer 4	2
36	Ring Spring 28*1.5	1	86	Left Handle	1
37	Ring Spring 27.5*1.5	1	87	Cord Sleeve	1
38	Impact Bolt Sleeve	1	88	Cord Anchor	1
39	O Ring 16.2*4.5	1	89	Cord	1
40	O Ring 10*3	1	90	Siderosphere	1

41	Stop Collar	1	91	T Type Screw	1
42	Ring Spring 27.5*2	1	92	Side Handle Hoop	1
43	Piston	1	93	Assist Handle	1
44	O Ring 15.3*3	1	94	M8 Nut	1
45	Cylinder	1	95	Staff	1
46	Cylinder pin Washer	2	96	Staff Lock	1
47	Cylinder Pin	1	97	Spring	1
48	O Ring 53*7	1	98	Trademark	1
49	Sleeve	1	99	Name Plate	1
50	Stand	1	100	Parameter Plate	1