



ELECTRIC SPRAY GUN spare parts list

Part No.	Part Name	QTY	Part No.	Part Name	QTY
1	Filter cover	1	25	Nut	1
2	Seal cover	1	26	Gun	1
3	Filter	1	27	Material adjustment knob	1
4	Inner fan cover	1	28	Seal ring	1
5	Valve nut	1	29	Spring 1	1
6	Valve spring	1	30	Suction tube assembly	1
7	Motor assembly	1	31	Container	1
8	Valve spring assembly	1	32	Screw	6
9	Capacitor	1	33	Screw	1
10	Damping washer	1	34	Locking knob	2
12	Motor holder	1	35	Right enclosure	1
11	Valve assembly	1	41	Left enclosure	1
21	Valve holder assembly	1	36	Right clip	1
23	Nozzle	1	37	Screw	2
13	Shaft spring ring	1	38	Terminal block	1
14	Back-up ring	1	39	Switch	1
15	Lock nut	1	40	Internal lead wire	1
16	Ring	1	42	Cord clamp	1
17	Lead wire seal ring	1	43	Cord protector	1
18	Trigger	1	44	Power cord	1
19	Gun flap	1	45	Rotating head	1
20	Screw	4	46	Push bar	1
22	Splitter	1	47	Spring 2	1
24	Air cap	1	48	Left clip	1